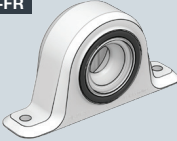
 
 



 
 
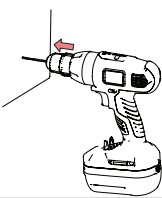
 
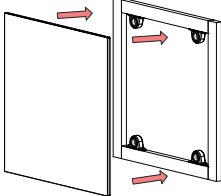
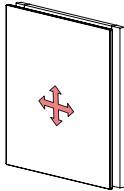
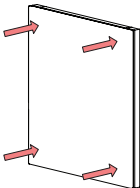
SL-SFA Stratlock® Range - screw fix

SL-SFA-FR Stratlock® Range - screw fix - fire rated

<p>SL-SFA</p>	<p>USE WITH:</p>	<p>INSTALL WITH:</p>
<p>SL-SFA-FR</p>	<p>SL-M18 or SL-M18-FR</p>	<p>CP-01ST</p>
		
		<p>2 x #8 panhead screws (20mm, timber frame)</p>
		<p>OR</p> <p>#8 tek screws (20mm, aluminium/steel frame)</p>

INSTALLATION STEPS Screw-fix method - follow same steps for fire-rated Stratlock clips

Note: Refer into steps 6 - 11 on SL-FA Adhesive Fix Installation Guide for adhesive application.

<p>1</p>  <p>Position SL-SFA along frame</p>	<p>2</p>  <p>Screw into position using 2 x #8 pan head 20mm screws (timber) OR #8 tek 20mm screws (steel/alum.)</p>	<p>3</p>  <p>Press CP-01ST centrepoint into SL-SFA, press panel onto point</p>	<p>4</p>  <p>Drill out mark created by CP-01ST with 3mm drill bit</p>
<p>5</p>  <p>Install SL-M18 with #8 screw</p>	<p>6</p>  <p>Engage panel to first click of SL-M18 into SL-SFA</p>	<p>7</p>  <p>Adjust panel to find correct position</p>	<p>8</p>  <p>Once panel is in correct location, engage second click by pressing panel into final position.</p>