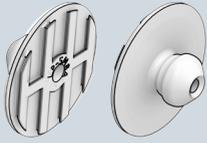
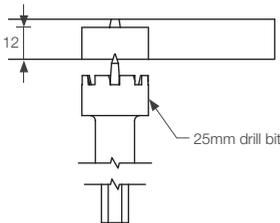
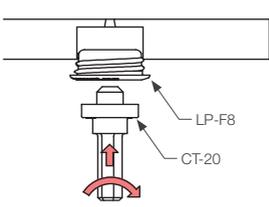
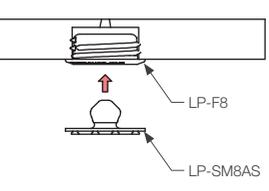
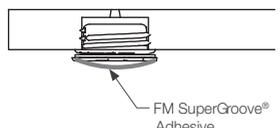
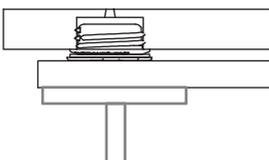



## LP-SM8AS Low Profile Surface Mount Male

<p><b>LP-SM8AS</b></p>  <p>Reverse</p>	<p><b>USE WITH:</b></p> <p>LP-F8    LP-DF8    LP-AF8A</p> 	<p><b>INSTALL WITH:</b></p> <p>SuperGroove® adhesive</p>
--	---	--

### INSTALLATION STEPS Glue on option

<p><b>1</b> Drill 25Ø hole in frame</p>  <p>25mm drill bit</p>	<p><b>2</b> Screw LP-F8 into frame, use battery drill with clutch set.</p>  <p>LP-F8 CT-20</p>	<p><b>3</b> Fit LP-SM8AS into LP-F8</p>  <p>LP-F8 LP-SM8AS</p>
<p><b>4</b> Adhesive to LP-SM8AS</p>  <p>FM SuperGroove® Adhesive</p>	<p><b>5</b> Drill panel on mark with CT-09</p> 	

**A** Cutaway view of installed clip (panel removed)

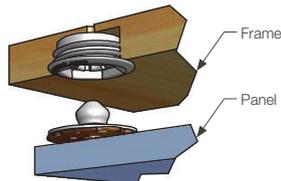

NB. CT-12 to CSK hole edge in hard material (1-2mm)

MORE INFO: Clip Layout guide TD-02 & TD-08