





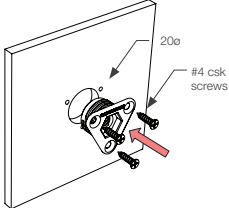
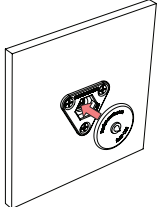
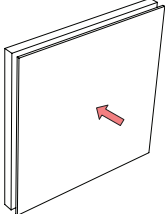
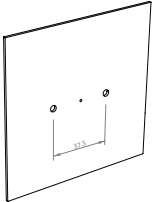
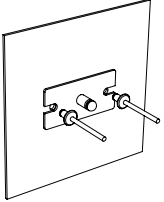
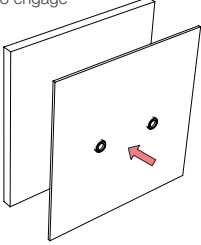


**MC-SM5** Metal Male Clip – Surface Mount


<b>MC-SM5</b>	<b>USE WITH:</b>	<b>INSTALL WITH:</b>			
	<p>MC-F5    MC-F10</p>  <p>Note: Installation of wall panels only.</p>	<p>MC-CP5</p> 	<p>20Ø drill</p> 	<p>MC-IT5</p> 	<p>#4 CSK screw</p> 

**INSTALLATION STEPS** MC-SM5 to MC-F5


<p><b>1</b> Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws</p>  <p>Note: min. 13mm deep for self-tapping into plywood or similar</p>	<p><b>2</b> Insert MC-CP5 into female clip to mark panel location</p> 	<p><b>3</b> Press panel firmly in position to mark correct MC-SM5 location</p> 
<p><b>4</b> Drill holes for screw or rivet fixing. Holes should be a minimum 19mm away from mark</p> 	<p><b>5</b> Position MC-SM5 and screw or rivet fix to panel</p> 	<p><b>6</b> Press panel against substrate to engage</p> 

**MC-SM5-VHBFR** Metal Male Clip – Adhesive Mount Fire Rated

**MC-SM5-VHBFR**

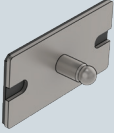


**USE WITH:**

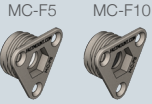


Note: Installation of wall panels only.

**INSTALL WITH:**

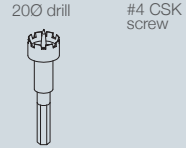


**INSTALLATION STEPS** MC-SM5-VHBFR to MC-F5

- 1 Drill hole into support frame, fit MC-F5 or MC-F10 with MC-IT5 tool. Option: screw fix with #4 CSK screws

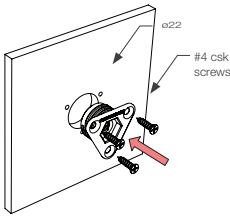

- 2 Clip MC-SM5-VHB into female clip, and remove protective backing from adhesive

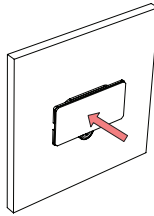

- 3 Align panel into correct position and press firmly against substrate to fix.

