



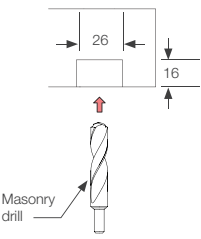
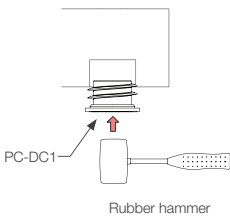
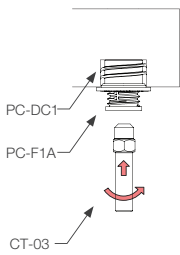
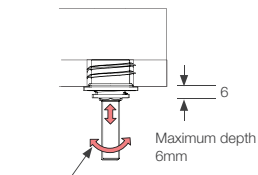
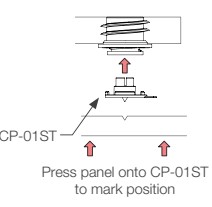
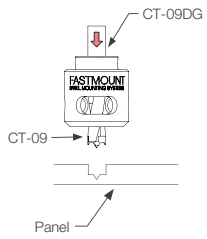
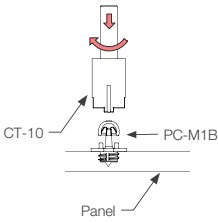
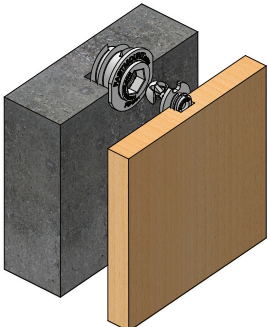


PC-DC1 Female Anchor - Concrete

<p>PC-DC1</p> 	<p>USE WITH:</p> <p>PC-F1A</p>  <p>PC-M1B PC-VM1 PC-SM2 PC-M2H PC-VMX PC-SM2H PC-SM1AC</p> 	<p>INSTALL WITH:</p> <p>26mm masonry drill CP-01ST CT-03 CT-09 CT-09DG</p> <p>Rubber hammer</p> 
---	--	---

INSTALLATION STEPS FOR CONCRETE

<p>1 Drill 26mm hole, 16mm deep</p>  <p>Masonry drill</p>	<p>2 Hammer-set flush</p>  <p>PC-DC1 Rubber hammer</p>	<p>3 Screw PC-F1A into PC-DC1</p>  <p>PC-DC1 PC-F1A CT-03</p>	<p>4 Adjust depth to suit</p>  <p>CT-03 Maximum depth 6mm</p>
<p>5 Fit CP-01ST into PC-F1A</p>  <p>CP-01ST Press panel onto CP-01ST to mark position</p>	<p>6 Drill out mark on panel with CT-09</p>  <p>CT-09DG CT-09 Panel</p>	<p>7 Screw fit male clip with CT-10</p>  <p>CT-10 PC-M1B Panel</p>	 <p>Cross section of PC-DC1, PC-F1A & PC-M1B installed</p>