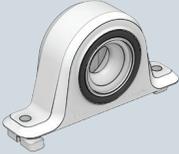
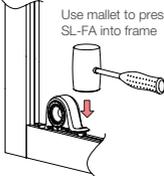



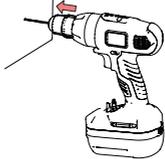

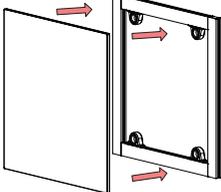
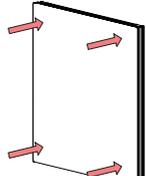


## SL-FA Stratlock™ Range - Screw fix


<p><b>SL-FA</b></p> 	<p><b>USE WITH:</b></p> <p>SL-M18</p> 	<p><b>INSTALL WITH:</b></p> <p>#8 screw #10 screw CP-01ST</p> 
--	---	---

### INSTALLATION STEPS Screw fix method

<p><b>1</b></p>  <p>Insert SL-FA into extrusion frame</p>	<p><b>2</b></p>  <p>Use twist-lock function to locate position</p>	<p><b>3</b></p>  <p>Use mallet to press SL-FA into frame</p>	<p><b>4</b></p>  <p>Slide SL-FA horizontally into final position if required</p>
<p><b>5</b></p>  <p>Use 2 x #10 screws or #5 rivets to fix into place</p>	<p><b>6</b></p>  <p>Insert CP-01 ST into SL-FA and press panel into correct position, marking the panel</p>	<p><b>7</b></p>  <p>Drill out mark created by CP-01 ST with 3mm drill bit</p>	<p><b>8</b></p>  <p>Install SL-M18 with #8 screw</p>
<p><b>9</b></p>  <p>Engage panel to first click of SL-M18 into SL-FA</p>	<p><b>10</b></p>  <p>Adjust panel to find correct position</p>	<p><b>11</b></p>  <p>Once panel is in correct location, engage second click by pressing panel into final position.</p>	

**SL-FA** Stratlock™ Range - Adhesive fix

SL-FA

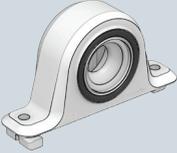

USE WITH:

SL-M18



INSTALL WITH:

Fastmount SuperGroove®  
Adhesive  
#10 screw

**INSTALLATION STEPS** Adhesive fix method

<p><b>1</b> Insert SL-FA into extrusion frame</p>	<p><b>2</b> Use twist-lock function to locate position</p>	<p><b>3</b> Use mallet to press SL-FA into frame</p>	<p><b>4</b> Slide SL-FA horizontally into final position if required</p>
<p><b>5</b> Use 2 x #10 screws or #5 rivets to fix into place</p>	<p><b>6</b> Engage SL-M18 two clicks into SL-FA</p>	<p><b>7</b> Apply Fastmount SuperGroove® Adhesive CG-5010 to SL-M18</p>	<p><b>8</b> Press panel into place</p>
<p><b>9</b> Use panel support while adhesive dries</p>	<p><b>10</b> Once adhesive has dried, remove panel. Replace and engage one click to adjust panel to find correct position</p>	<p><b>11</b> Once panel is in correct location, engage second click by pressing panel into final position.</p>	