


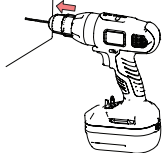

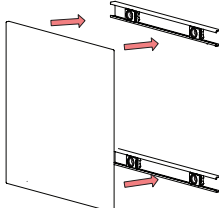
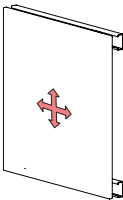
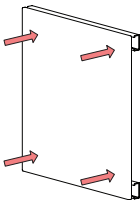


SL-FB Stratlock™ Range Screw Fix

SL-FB	USE WITH:	INSTALL WITH:
	SL-M18	#8 screw CP-01ST
		





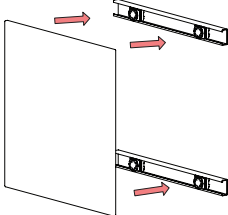
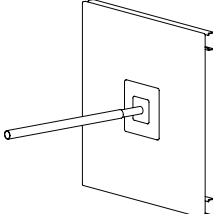
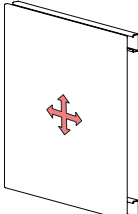
INSTALLATION STEPS Screw fix method

<p>1 Push fit SL-FB into frame</p> 	<p>2 Locate SL-FB into correct position</p> 	<p>3 Insert CP-01 ST into SL-FB and press panel into correct position, marking the panel</p> 	<p>4 Drill out mark created by CP-01ST with 3mm drill bit</p> 
<p>5 Install SL-M18 with #8 screw</p> 	<p>6 Engage panel to first click into SL-FB</p> 	<p>7 Adjust panel to find correct position</p> 	<p>8 Once panel is in correct location, engage second click by pressing panel into final position</p> 

SL-FB Stratlock™ Range Adhesive Fix

<p>SL-FB</p> 	<p>USE WITH:</p> <p>SL-M18</p> 	<p>INSTALL WITH:</p> <p>Fastmount SuperGroove® Adhesive</p>
---	---	--

INSTALLATION STEPS Adhesive fix method

<p>1 Push fit SL-FB into frame</p> 	<p>2 Locate SL-FB into correct position</p> 	<p>3 Engage SL-M18 two clicks into SL-FB</p> 	<p>4 Apply Fastmount SuperGroove Adhesive CG-5010 to SL-M18</p> 
<p>5 Press panel into place</p> 	<p>6 Use panel support while adhesive dries</p> 	<p>7 Once adhesive has dried, remove panel. Replace and engage only one click to adjust panel around the SL-M18's point</p> 	<p>8 Once panel is in desired location, engage second click by pressing panel into its final position</p> 