




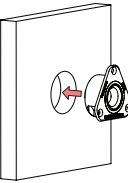
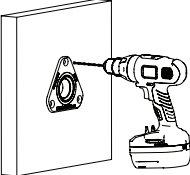


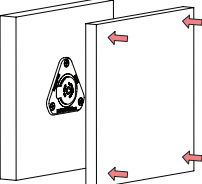
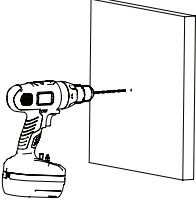
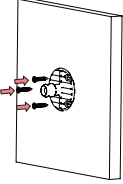
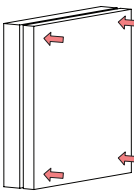
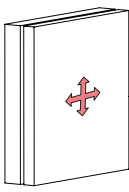
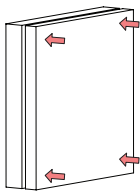


**SL-FC** Stratlock® Range - screw fix

**SL-FC-FR** Stratlock® Range - screw fix - fire rated

<p><b>SL-FC</b></p> 	<p><b>SL-FC-FR</b></p> 	<p><b>USE WITH:</b></p> <p>SL-M10, SL-M18, SL-M18-FR</p> 	<p><b>INSTALL WITH:</b></p> <p>#5 screws #8 screws CP-01ST</p> 
---	--	--	--

**INSTALLATION STEPS** Screw-fix method - follow same steps for fire-rated Stratlock clips

<p><b>1</b> Drill out 40mm hole</p> 	<p><b>2</b> Press SL-FC into hole</p> 	<p><b>3</b> Pre-drill 2.5-3mm holes depending on substrate density</p> 	<p><b>4</b> Fasten SL-FC with 3 x #5 screws</p> 
<p><b>5</b> Fit CP-01ST into SL-FC</p> 	<p><b>6</b> Position panel and press firmly against CP-01ST to mark position of male clip</p> 	<p><b>7</b> Drill out mark created by CP-01ST with drill bit according to fitting preference (1 or 3 screws)</p> 	<p><b>8</b> Install SL-M18 / SL-M10 with either 1 x #8 screw or 3 x 5 screws according to preference.</p> 
<p><b>9</b> Engage panel to first click of SL-M18/SL-M10</p> 	<p><b>10</b> Adjust panel to find desired position</p> 	<p><b>11</b> Once panel is in correct location, engage second click by pressing panel into final position</p> 	

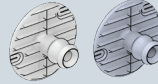
**SL-FC** Stratlock® Range - adhesive fix

SL-FC



USE WITH:

SL-M10 , SL-M18



INSTALL WITH:

Fastmount SuperGroove®  
Adhesive

#5 screws

**INSTALLATION STEPS** Adhesive fix method

<p><b>1</b> Drill out 40mm hole</p>	<p><b>2</b> Fit SL-FC into hole</p>	<p><b>3</b> Pre-drill 2.5-3mm holes depending on substrate density</p>	<p><b>4</b> Fasten SL-FC with 3 x #5 screws</p>
<p><b>5</b> Clip SL-M18 / SL-M10 into SL-FC</p>	<p><b>6</b> Apply Fastmount SuperGroove Adhesive to the back of male clip</p>	<p><b>7</b> Press panel against clips in desired position</p>	<p><b>8</b> Support panel in place while adhesive dries</p>
<p><b>9</b> Use CT-05 to disengage panel. To replace, engage one click and adjust panel to find correct position</p>	<p><b>10</b> Once panel is in correct location, engage second click by pressing panel into final position</p>		