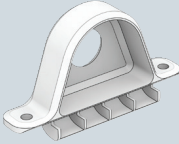
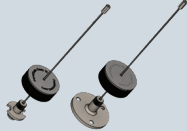
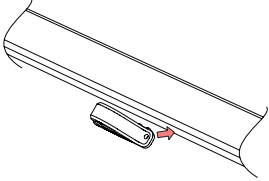
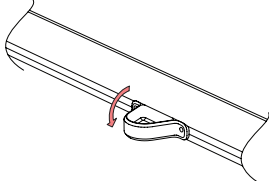
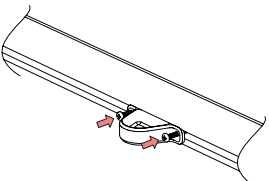
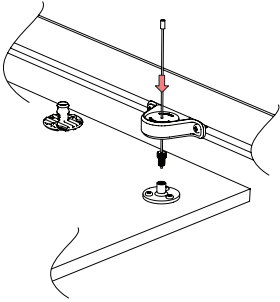
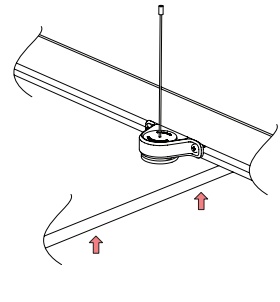


SL-SMT1 Stratlock® Sidemount - Installation with PanelSafe Easyfit

<p>SL-SMT1</p> 	<p>USE WITH: PS-S150E PS-S150E</p> 	<p>INSTALL WITH: #8 screws</p>
--	---	---







INSTALLATION STEPS Installation with PanelSafe

<p>1 Insert SL-SMT1 into SL-RLE</p> 	<p>2 Click into place</p> 	<p>3 Use #8 screws to fix SL-SMT1 into position</p> 
<p>4 Pass the PS-150E or PS-S150E through SL-SMT1 and attach to panel with appropriate Stratlock Range clips already installed</p> 	<p>5 Clip panel into position</p> 	<p>! NEW Stratlock SL-RLE shown.</p>

SL-SMT1 Stratlock® Sidemount - Suspension of SL-RLE with M10 threaded rod hanger

<p>SL-SMT1</p> 	<p>USE WITH:</p> <p>M10 threaded rod hanger</p> 	<p>INSTALL WITH:</p> <p>#8 screws</p>
--	--	--

INSTALLATION STEPS using M10 threaded rod hanger
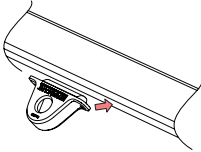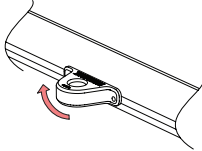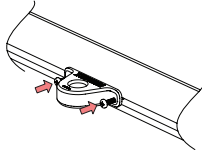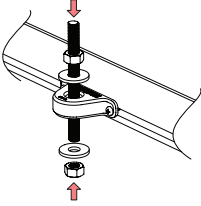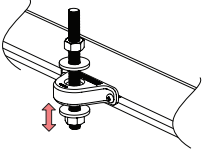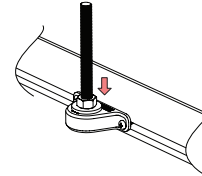
<p>1 Insert SL-SMT1 into channel of SL-RLE, logo side facing up</p> 	<p>2 Click into place</p> 	<p>3 Use #8 screws to fix SL-SMT1 into position</p> 
<p>4 Insert ceiling hanger through SL-SMT1</p> 	<p>5 Set bottom M10 nut at correct hanging distance</p> 	<p>6 Tighten top nut to lock SL-SMT1 in place and continue panel installation according to Stratlock Range installation guides.</p> 

! NEW
Stratlock SL-RLE shown.