MC-05 & MC-10 Metal Clip Set

MC-05

MC-10

INSTALL WITH:

| MC-CP5 | 20Ø drill | CT-09 | MC-IT5 |

Note: Installation of wall panels only.
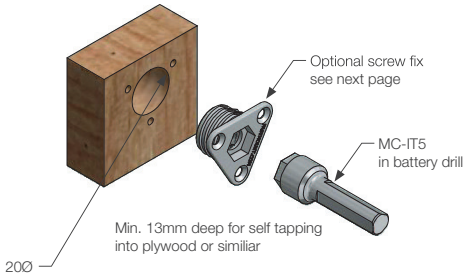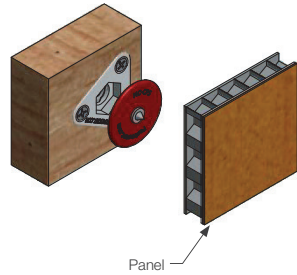
INSTALLATION STEPS Self tapping method

1 Drill hole through support frame and fit MC-F5 or MC-F10

Optional screw fix see next page

MC-IT5 in battery drill

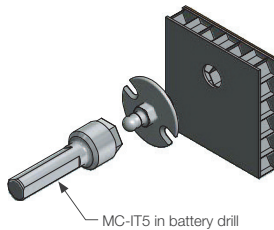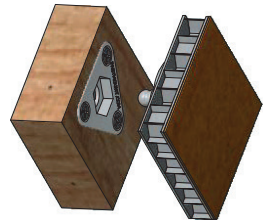Min. 13mm deep for self tapping into plywood or similiar

20Ø

2 Mark panel with MC-CP5

Panel

3 Drill panel on centre mark

9

Ø10
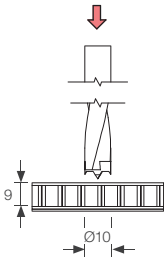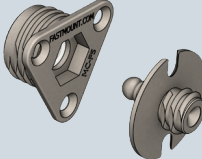
4 Self tapping screw fit MC-M5 into panel

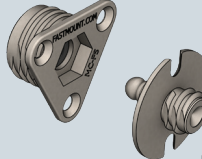MC-IT5 in battery drill

5 Exploded cutaway view of installed clip set

INSTALLATION GUIDE MC-05 & MC-10 / DATE 08/21
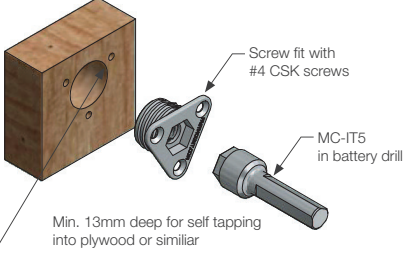**PROUDLY DESIGNED & MANUFACTURED IN NEW ZEALAND**
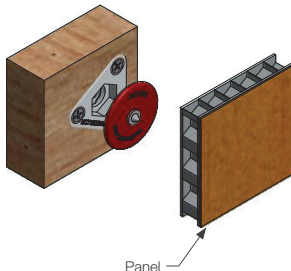
MC-05 & MC-10 Maxi Metal Clip Set

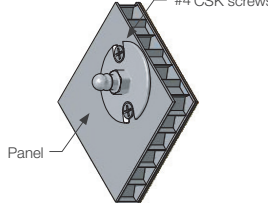| MC-05	MC-10	USE WITH:	INSTALL WITH:			
		#4 gauge CSK screw	MC-CP5	20Ø drill	CT-09	MC-IT5

Note: Installation of wall panels only.

INSTALLATION STEPS Screw fix method

1 Drill hole through support frame and fit MC-F5 or MC-F10

Screw fit with #4 CSK screws

MC-IT5 in battery drill

Min. 13mm deep for self tapping into plywood or similiar

20Ø

2 Mark panel with MC-CP5

Panel

3 MC-M5 screw fixed to panel

#4 CSK screws

Panel

4 Exploded cutaway view of installed clip set

INSTALLATION GUIDE MC-05 & MC-10 / DATE 08/21
PROUDLY DESIGNED & MANUFACTURED IN NEW ZEALAND